HEATHKIT

MPA N

Phone 616-983-3961 • TWX-616-983-3897 • Benton Harbor, Michigan 49022

January 10, 1972

.05

Dear Customer:

Please make the following changes in the GDA-19-41 Servo Manual that is supplied with this kit. Then use this Manual to assemble your GDA-405-4 Miniature Servo.

Page 4 - Under "Wire Sleeving,"

Delete:

1 White wire

344-99

Page 5 - Under "Miscellaneous,"

	Change:	F5	432-104	1	4-pin male connector	.70
	To:		238-32	1	4-pin male connector	1.45
					assembly	

Fold-out from Page 7 - Cross out illustration F5.

Page 8 - Cross out the steps on Page 8 in your Servo Manual. Then tape Page 8 of this letter over Page 8 in your Servo Manual.

Fold-out from Page 8 - Tape Pictorial 1 of this letter over Pictorial 1 in your Servo Manual.

Fold-out from Page 23 - Tape Figure 4 of this letter over Figure 4 in your Servo Manual.

Thank you,

HEATH COMPANY

Page 1 of 3 GDA-405-4 597-1117

Page 8

HEATHKIT'

STEP-BY-STEP ASSEMBLY


Before you start to assemble this kit, be sure you have read the wiring, soldering, and step-by-step assembly information in the "Kit Builder's Guide."


CABLE INSTALLATION

Refer to Pictorial 1 for the following steps.

- () Install five rubber grommets in the case bottom section as shown.
- () Locate the 4-pin male connector assembly and insert the cable through the small grommet in the center of the case bottom.
- () Set the case bottom section and 4-wire cable aside.

Page 2 of 3 GDA-405-4 597-1117

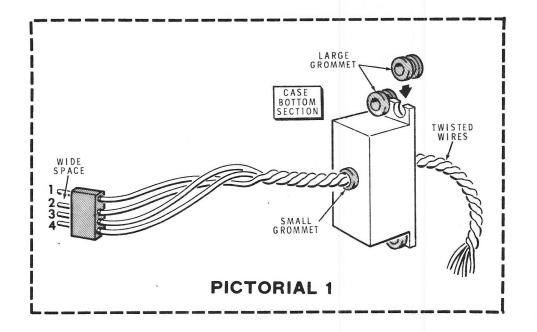

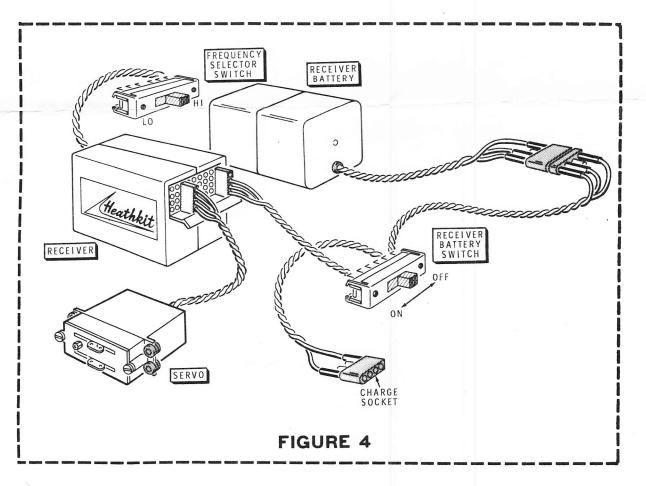

Page 3 of 3 GDA-405-4 597-1117